

Instructions for use of the belt buckle – front assembly

1. The attachment of the holder to a belt

- The holder is **attached to a belt** by slipping the belt through the gap in the buckle and possibly shift the adjustable stop **A**, so that the buckle is firmly fixed on the belt. Then tighten thoroughly both screws **B** to prevent their spontaneous release.
- **BEWARE!** The holder has been designed for the most common kinds of belts of the width **from 32 to 50 mm (after removal of the adjustable stop to 60 mm)**. The holder may not be attachable to atypical belts – the extremely wide or, in contrast, extremely narrow ones. Belts made of too thin or inappropriately thick materials can also create difficulties for the carry or attaching!

2. The holder angle adjustment

- **The holder can be rotated in respect to the belt by 360 degrees and it has 16 arrest positions.**
- The resistance of the rotary mechanism can be adjusted, when **the turning is too difficult** (or too easy). This is done by slight loosening or tightening of the fixing bolt **H** with a Phillips screwdriver so that the resistance force suits your needs – see Fig. 2.

