

Instructions for use of the holder for the magazine for the rifles:



1. Setting of the thrust of the magazine

- The holder makes it possible to set the thrust of the magazine with use of 3 spacers J of different height. The manufacturer supplies the holder with inserted spacer No. 2, which corresponds to the average thrust.
- To change this thrust, push the spacer No. 2 away from the holder by flat screwdriver and replace it with the lower spacer No. 1 – to reduce the thrust, or with the higher spacer No. 3 – to increase the thrust of the magazine – see Fig. 1. Each spacer J is marked with its number – see Fig. 2.

2. The holder angle adjustment

- The holder can be rotated in the range of 360 degrees (there are 16 possible fixed positions).
- The resistance of the rotary mechanism can be adjusted, when the turning is too difficult (or too easy). This is done by pressing the flat-blade screwdriver into the slot of the spacer J, which loosens it – see Fig. 1. This will open a hole enabling an access to the fixing bolt H. Now slightly loosen or tighten the fixing bolt H with a Phillips screwdriver so that the resistance force of the rotary mechanism suits your needs – see Fig. 3.

