

Instructions for the use of the fixation clip for the MOLLE webbing | UBC-04-1 / UBC-04-2

It is not necessary to remove the MOLLE fixation clip from the rest of the holder before attaching it to the MOLLE webbing.

You can remove the fixing plate from the clip by pulling on the catch on its upper end. You will hear a distinctive click when the catch is loosened. After that you can freely remove the fixing plate.

Hold the fixing plate so you can see the arrow. Insert it into the fixation clip in the direction of the arrow. It is recommend to use a flat head screwdriver when inserting the fixing plate. If the fixing plate is fully inserted into the fixation clip, you will hear an audible click when it snaps into the final position.

The instructions with photographs for the attachment of the fixation clip to the MOLLE webbing can be found on the reverse side of this guide.

When attaching the double-row version of the fixation clip to the MOLLE webbing, **both fixing plates have to be inserted behind the MOLLE straps** – see the figure on the right. The following steps are the same as in the case of the single-row version – see the reverse of this page.





Adjustment of the rotary mechanism (setting the angle of the holder)

The holder can be rotated in the range of 360 degrees without the use of any tool (there are 16 possible fixed positions).

If you want to change the resistance of the rotary mechanism by adjusting the screw on the back of the holder, this must be done before the holder is attached to the MOLLE webbing.

The resistance of the rotary mechanism (if turning the holder is too difficult or too easy) can be adjusted. This is done by slightly loosening or tightening the fixing bolt **H** with a Phillips screwdriver so that the resistance of the rotary mechanism suits your needs – see the figures on the right.

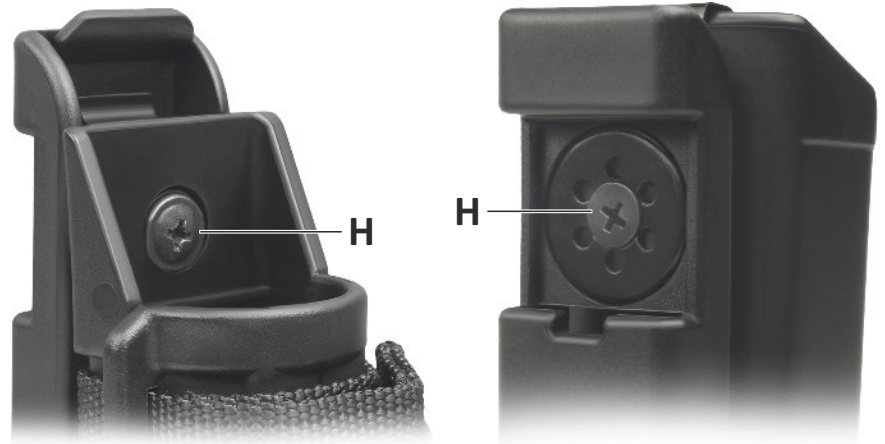

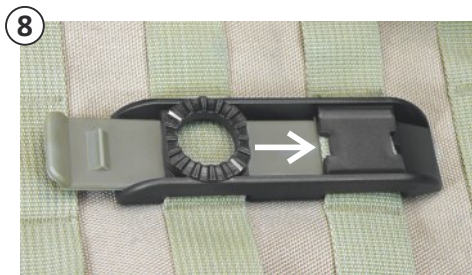

Video instructions:
www.esp-holders.com/molle

